



24350 State Road 23 South, South Bend IN 46614

Tel: (574)233-4500

Fax: (574)288-4550

Mattresses: www.derbyindustries.com

Cases: www.derbycase.com

Email: sales@derbyindustries.com

Recommended Installation Procedures for the Derby Custom Shower Curtain System

Mounting the Custom Track

IMPORTANT: The curtain track for the Derby Shower Curtain System is intended to be surface mounted to a solid, flat, continuous surface **ONLY**. The curtain track is not designed to be used in a suspended fashion (like a curtain rod would be used).


Measure area where track is to be mounted. Confirm proper track length and cut-to-fit to ensure track may be surface mounted. Cut track on opposite end of removable security block. Pre-drill mounting holes on the curtain track centered on the outer lip of the track. ****DO NOT** drill holes inside of the track slide as this will cause shower curtain system to fail. It is recommended that security head mounting screws be attached on each side of track slide no more than 2" from each end, then no more than 12" in distance between screws.

Run a generous bead of security caulk down the entire length of the curtain track in the tooled groove on the side opposite of the track slide. Confirm that the end opposite the removable security block is butted up against a perpendicular object. Using security head screws (at least 1" in length) mount curtain track to the solid, flat, continuous surface. Wipe away any excess security caulk.

Inserting/Adjusting Velcro and Sliding Tabs

The Velcro tabs are designed to break away (pull out) from the slides. They may be adjusted to change the degree of difficulty to break away, but they will still break away. They are not designed to support significant weight. To adjust the Velcro tabs so that they are more difficult to break away, simply push the Velcro tab partially out of the top of the slide. Fold the tab where it has been bar tacked and place it back in the slide. Each Velcro tab may be folded up to 2 times to create the maximum pull-resistance our system allows.

Using the security bit provided, remove the security block and feed the Velcro tabs/slides into the track so that all of the Velcro tabs are facing the same direction. Replace the security block and hand tighten the security screw. Do not over tighten.

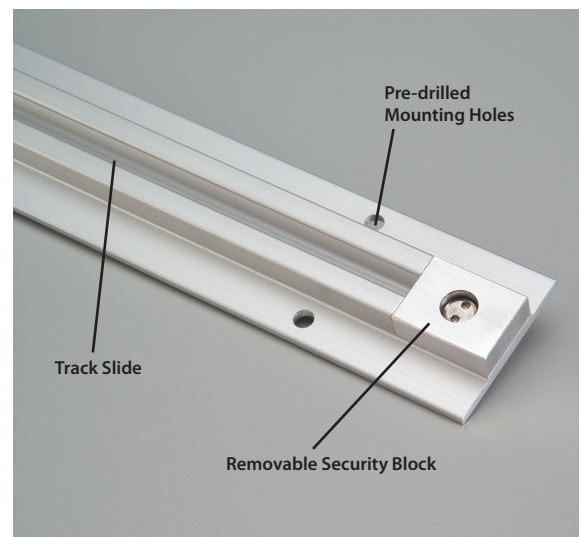

Attaching/Adjusting the Curtain

Attach the shower curtain to the Velcro tabs. The desired length may be adjusted by raising the level at which the curtain is attached to the Velcro tabs. The curtain may also be cut (trimmed) to desired length.